

Documentation

RotoLAB Setup

FANUC

Version 3.8

As at: 16.02.2022

Wiest Aktiengesellschaft Siemensstr. 4, 86356 Neusäß www.wiest-ag.de



Content:

1. Supported robot controllers and available interfaces	6
2. Scope of delivery	6
3. Mechanical installation	7
4. Electrical installation	9
4.1. Power supply	9
4.2. RS232 interface	9
4.2.1. Robot controller	9
4.2.2. RotoLAB	9
4.3. Ethernet interface	. 10
4.4. Fieldbus interface	. 10
4.4.1. Power supply	. 10
4.4.2. Data cable	. 10
5. Software installation	.11
5.1. Overview of the supplied files	. 11
5.2. Robot program loading	.11
5.3. Change of Karel variables	.11
6. Language selection	. 12
7. Communication interface setup	. 12
7.1. RS232 interface	. 12
7.2. Ethernet interface	.13
7.2.1. RotoLAB network settings	. 13
7.2.2. Robot controller	. 14
7.3. Fieldbus	. 14
7.3.1. Protocol converter	. 14
7.3.2. Robot controller	. 14
8. Naming convention	. 15
9. RotoLAB mode of operation	. 15
9.1. Status LED	. 16
9.2. Power-up – Initialization of the measuring sensor	. 16
10. Initial setup	. 17
10.1. Teach-in of start points	. 17
10.1.1. Position X_NOMINAL	. 17
10.1.2. Position X_PREPOS	. 18
10.2. Start of measuring program	. 19
10.3. Measuring the RotoLAB location	.21



10.4. Initial measurement of a tool	22
10.5. Measuring additional tools	23
10.6. Using additional robots	24
10.6.1. RS232 interface	24
10.6.2. Ethernet interface	24
10.6.3. Two robots on one controller	24
11. RotoLAB integration into the production process	25
11.1. Call of the RotoLAB program	25
11.2. Test in automatic operation	25
11.3. Test in manual operation	26
12. Individual event procedures	27
12.1. Program RL_ONS_1.TP	27
12.2. Program RL_ONE_1.TP	27
12.3. Variable RL_ERROR_STATE	27
13. Geometric configuration – TCP alignment	30
13.1. Parameter RL_DIAMETER	31
13.2. Parameter RL_Z_OFFSET	31
14. Geometric Configuration – Typical Settings	33
14.1. Stand application welding torch	33
14.2. Alternative measuring position welding torch	34
14.3. Spot welding guns, gluing nozzles	35
15. Configuration of thresholds	36
15.1. OK range	37
15.2. Automatic correction range	37
15.3. Manual correction range	37
15.4. No correction allowed	39
16. RotoLAB PLC interface configuration	40
16.1. Signal RL_PLC_RET	40
16.2. Signals RL_MSG_QUITT and RL_MSG_ANSW	41
17. The RotoLAB Menu	41
17.1. RotoLAB Main Menu	42
17.2. RotoLAB Service	43
17.3. RotoLAB Settings	44
17.4. Interface Settings	47
18. Log-File	50
19. Approach RotoLAB exchange / maintenance	50



20. Functional test / troubleshooting	51
20.1. Functional test	51
20.2. Troubleshooting	
21. Technical data	53

Figures:

Figure 1: Measuring plane of RotoLAB7
Figure 2: Flange
Figure 3: Example for a mounted RotoLAB8
RotoLAB features a M12 A-coded flange connector for the power supply (see Figure 4). +24V
are required
Figure 4: Pin assignment M12 flange connector9
Figure 5: Combined power/data cable9
Figure 6: Flange socket M12 / RJ4510
Figure 7: Interface JD17 Port 3 to "No Use"13
Figure 8: Naming conventions15
Figure 9: Program RL_NOM_1.TP17
Figure 10: Position X_NOMINAL18
Figure 11: Position X_PREPOS
Figure 12: Call of RL_MAIN.PC in RL_R1T1.TP20
Figure 13: RotoLAB Main Menu20
Figure 14: Start of location measuring21
Figure 15: Location measuring successfully completed22
Figure 16: Message on completion of initial measurement23
Figure 17: Schematic diagram of standard test25
Figure 18: Selection options in manual operation26
Figure 19: Register instructions in RL_R1T1.TP29
Figure 20: Measuring parameters for TCP alignment
Figure 21: Standard settings
Figure 22: Alternative settings for welding torches
Figure 23: Settings for gluing nozzles35
Figure 24: Threshold values for tool measurement
Figure 25: Deviation within the manual correction range
Figure 26: Error message absolute deviation too great



Figure 27: RotoLAB Main Menu	
Figure 28: RotoLAB Service	43
Figure 29: RotoLAB Settings	44
Figure 30: Interface Settings	47

Tables:

Table 1: Pin assignment for M12 d-coding and RJ45	10
Table 2: Files for RotoLAB	11
Table 3: Status LED states	16
Table 4: Variable RL_ERROR_STATE	
Table 5: Typical settings	
Table 6: Threshold values (all threshold values are absolute values)	
Table 7: Signal RL_PLC_RET	40
Table 8: Signals RL_MSG_QUITT & RL_MSG_ANSW	41
Table 9: RotoLAB Errors	52
Table 10: Technical data	53



1. Supported robot controllers and available interfaces

- RJ3 and following with software version V7.20 or later Available Interfaces:
 - o **RS232**
 - Ethernet (Software option "User Socket Msg" is required)
 - Fieldbus via protocol converter

2. <u>Scope of delivery</u>

The following are included in RotoLAB delivery:

- RotoLAB measuring system
- Flange for mounting RotoLAB
- Robot programs for operation of RotoLAB (see USB-Stick)
- Documentation of RotoLAB setup and application (see USB-Stick and hard-copy)
- For RotoLABs with RS232 Interface:
 - Combined power/data cable with plug for the JD17 slot (item no.: 5 29 000 00)



3. Mechanical installation



Figure 1: Measuring plane of RotoLAB

Important:

RotoLAB must be positioned in a way that the **measuring plane (Figure 1) of RotoLAB is in a 90° angle to Z+ of the robot coordinate system.** Otherwise RotoLAB will not work.

If the robot is installed on the floor, RotoLAB is fitted horizontally (in parallel to the floor).

RotoLAB is an optical measuring system. It is designed to be insensitive to the irradiation of extraneous light (e.g.: light from above does not have any effect). Make sure, that RotoLAB is installed in a way that strong lateral light (angle of incidence < 22° in relation to the measuring plane) is avoided, as this could result in a malfunction. The arc of light during welding does not constitute a source of interference as lateral light, however only interferences during the measuring cycle.

This means that with multi-robot environments care must be taken to ensure that none of the other robots is welding during a measurement.

Hint!

If lateral light irradiation cannot be avoided, for example because welding is still going on while a measurement is in progress, we offer an additional cover (item no.: 5 32 001 00) which can be used to shield the system from lateral light.

On the mount to which you wish to secure the RotoLAB, drill through-holes 140 mm apart, with a diameter of 6mm (Figure 2). Now secure RotoLAB to the mount by means of the flange.





Figure 2: Flange



Figure 3: Example for a mounted RotoLAB



4. Electrical installation

4.1. Power supply

RotoLAB features a M12 A-coded flange connector for the power supply (see Figure 4). +24V are required.

Hint!

With the RS232 interface, the power for the RotoLAB can be obtained via the JD17 interface of the robot controller. Therefore, use the delivered combined power/data cable.



Figure 5: Pin assignment M12 flange connector

4.2. RS232 interface

4.2.1. Robot controller

Connect the combined data/power cable (see Figure 6) with the JD17 labeled interface of the robot.

4.2.2. <u>RotoLAB</u>

Connect both the power supply and the RS232 connector of the power/data cable (see Figure 6) with the RotoLAB.



Figure 6: Combined power/data cable





4.3. Ethernet interface

RotoLAB features a M12 D-coded flange socket (see Figure 7) for Ethernet connection. Either connect RotoLAB directly to the robot controller or via the local network.

Important:

The slot ETHERNET CD38A (Ethernet Port#1) of the robot controller must be used to connect the RotoLAB.

Signal	Name	PROFINET colors	Colors claimed EIA T568B	Pin RJ45	Pin M12
TD+	Transmission Data +	yellow	white/orange	1	1
TD-	Transmission Data -	orange	orange	2	3
RD+	Receive Data +	white	white/green	3	2
RD-	Receive Data -	blue	green	6	4

Table 1: Pin assignment for M12 d-coding and RJ45



Figure 7: Flange socket M12 / RJ45

4.4. Fieldbus interface

4.4.1. Power supply

Power the protocol converter with +24V via the labelled input terminal.

4.4.2. Data cable

A RS232 data cable with Sub-D 9pin female to Sub-D 9pin male with 1:1 assignment is needed. Connect the data cable via gender changer with the protocol converter and the other end with the RS232 connector on the RotoLAB.



5. Software installation

5.1. Overview of the supplied files

File	Description							
RL_R1T1.TP	xample for the call of RL_MAIN with tool 1 and a subsequen							
RL_PRE_1.TP	The PRE-Positions are taught here.							
RL_NOM_1.TP	The NOMINAL-positions are taught here.							
RL_MAIN.PC	This file contains the RotoLAB main routines. All parameters for							
	the measuring process are declared in this file.							
RL_TEXT.PC	The message texts are included in this file.							
RL_COM.PC	File for the communication with the RotoLAB. The parameters							
	for the communication are declared in this file.							
RL_ONS_1.TP	Individual event procedure: Routine is executed at the start of							
	measuring. Must declared as macro!							
RL_ONE_1.TP	Individual event procedure: Routine is executed at the end of							
	measuring. Must declared as macro!							
Folder "Multirobot"	Required files if the RotoLAB is used with one controller and							
	two robots.							

Table 2: Files for RotoLAB

5.2. <u>Robot program loading</u>

Load the robot programs from the USB stick on the robot controller. If the RotoLAB is used on a robot controller with two robots and the second axis group also must be used with the RotoLAB, the files included in the folder "Multirobot" must be also loaded to the robot controller.

5.3. Change of Karel variables

Hint!

All settings can be done via the RotoLAB menu navigation (see section 17). A direct change of the Karel variables is not necessary.

The Karel has to be activated once as following to display the Karel variables: [MENU 2] \rightarrow [SYSTEM] \rightarrow [Variables] \rightarrow variable "\$KAREL_ENB" set to TRUE.

Then display all programs in the program overview: [TYPE] \rightarrow All. Now select with ENTER the desired Karel program (e.g. RL_MAIN.PC) \rightarrow press DATA button \rightarrow [TYPE] \rightarrow [KAREL Vars] \rightarrow All variables of RL_MAIN.PC are displayed and can be edited.



6. Language selection

For the RotoLAB application German and English language are available. In the RotoLAB main menu (see section 17.1) the language can be changed (variable "rl_language").

7. <u>Communication interface setup</u>

In the Interface Settings in the RotoLAB menu (see section 17.4) under "RotoLAB interface" the communication inteface can be selected (variable "rl_interface": 1 = Seriell, 2 = Ethernet, 3 = Feldbus).

Hint!

If RotoLAB is connected to the robot controller (see section 0) and the communication is set up, the connection to the RotoLAB can be checked by means of the function test (see section 20.1).

7.1. RS232 interface

RotoLAB communicates with the robot over the RS232C interface on the JD17 connector.

Important:

The appropriate interface must be set to "No Use". The robot controller has to be restarted to apply the changes.

Therefore select the menu item [MENU] \rightarrow [SETUP] \rightarrow [PORT INIT] and change the interface to "No Use" (see Figure 8).

Notice the com-port, which the interface JD17 is used. If a different port as port 3 is used, the port number must be changed accordingly. The port number can be changed in the Interface Settings in the RotoLAB menu (see section 17) under "RotoLAB interface" (variable "rl_ser_port").





Figure 8: Interface JD17 Port 3 to "No Use"

7.2. Ethernet interface

Important:

For this communication interface the software option "User Socket Msg" is required.

7.2.1. <u>RotoLAB network settings</u>

RotoLABs default IP-address is 192.168.1.200 with subnet mask 255.255.255.0. Network settings can be changed via RotoLABs web-interface. In delivery state, the web-interface can be accessed at the address 192.168.1.200:8080 via any web browser. Make sure that the used computer is within the same IP-address range and subnet as the RotoLAB.

Important:

In delivery state the password to apply changes is "rotolab". After making changes RotoLAB must be restarted by disconnecting the power supply.



7.2.2. Robot controller

On the robot controller following is required for the Ethernet communication: ip-address of the RotoLAB, port for the communication and a free "Client Tag". The overview of the Client Tags is displayed as following:

 $[MENU] \rightarrow [SETUP] \rightarrow [Host Comm]$. subsequently move the cursor to SM (Socket Messaging Device) and select $[SHOW] \rightarrow [Clients]$. In delivery state Client Tag 8 is used.

In the Interface Settings in the RotoLAB menu (see section 17) the paramter for the ethernet communication can be adjusted under "RotoLAB interface" (variables "rl_ip_addr", "rl_ip_port" und "rl_ip_tag").

7.3. Fieldbus

7.3.1. Protocol converter

The protocol converter must be integrated into the respective fieldbus. The device files can be found on the USB stick in the folder "Anybus". For the communication between robot controller and protocol converter 24 input bytes and output bytes are necessary (robot controller \leftrightarrow fieldbus \leftrightarrow protocol converter).

The protocol converter will be delivered pre-configured. However, if changes have to be made (e.g.: change of IP-address), proceed as follows:

- Install the Configuration Manager (in folder "Anybus")
- Connect the protocol converter with the PC via the delivered serial connecting cable.
- Establish a connection to the protocol converter and carry out a "Upload from communicator". Alternatively, the .cfg files can be found in the folder "Anybus".
- Modify the settings in the tab "fieldbus" and afterwards carry out a "Download to communicator".

7.3.2. Robot controller

The first input (DIN) and the first output (DOUT) of the total 192 inputs and outputs (= 24 Byte) must be defined on the robot controller. The inputs or rather outputs must all be directly adjacent to each other. In delivery state the first input or rather output is 161. In the Interface Settings in the RotoLAB menu (see section 17) the inputs and outputs can be adjusted under "RotoLAB interface" (variables "rl_bus_in" and "rl_bus_out").



8. Naming convention



Figure 9: Naming conventions

Figure 9 gives the designations of the components of a welding torch as used in this documentation.

9. RotoLAB mode of operation

RotoLAB checks and calibrates robot tools to ensure a constant production quality. RotoLAB allows the compensation of TCP changes, however it does not initially determine TCP data.

During TCP alignment the geometric changes of the tool are recorded and the tool data is corrected accordingly.

All rotation-symmetric tools (and approximates) with a diameter of 0.8 mm to 50 mm can be measured.

RotoLAB is based on a two-step procedure for 3D measuring. A 2D coordinate measurement (X, Y) is performed and a 1D bisection procedure (Z). The measurement area of RotoLAB is 75 mm in diameter.

Due to the short duration of the test (minimum 4 sec), it is possible to continuously check the dimensional accuracy of the tool during production cycles.

If the defined threshold is exceeded, an automatic calibration is started (which takes approx. 30 sec).

Hint!

If a 2D correction (X, Y) for the tool is sufficient, the Z-correction can be disabled in the RotoLAB Settings (see section 17.3) under "Tool parameter" (variable "rl_DoZlter"). In addition, the duration of the test will be reduced.



9.1. Status LED

Status LED	Description
Green	RotoLAB is ready for operation.
Red	RotoLAB is busy, a measurement is being carried out.
Flashing red	Initialization of measuring sensors failed.

Table 3: Status LED states

9.2. Power-up – Initialization of the measuring sensor

Once RotoLAB is connected to the power supply it will start automatically and initializes the measuring sensors. This procedure takes about one minute and is indicated by the red operating LED. During initialization, the illumination brightness will be adjusted.

Important:

To allow proper initialization of the measuring sensors, the measuring area of RotoLAB must be clear at power-up.

Hint!

For optimal initialization of the measuring sensors, it makes sense to ensure that when RotoLAB is powered-up, the approx. same ambient brightness prevails as during regular operation.

Hint!

The measuring sensors only must be initialized once. Changes in the ambient conditions or aging of the lighting equipment are checked by RotoLAB continuously at each measurement and the illumination brightness is adjusted if necessary.

Once initialization has been successfully completed, the RotoLAB operating LED switches to green, indicating that RotoLAB is ready for operation.

If the initialization was unsuccessful, the operating LED flashes red. Check whether there is strong lateral light irradiation (see section 3), or whether the measuring area was not clear at initialization. Disconnect RotoLAB from the power supply and reconnect it. For trouble-shooting see also section 19.



10. Initial setup

In delivery state, RotoLAB is configured for a standard welding torch (see section 0). If a standard welding torch is used, no configuration of geometric parameters is required, and the default parameters can be used. Where unsure, see sections on geometric configuration (section 14) to check whether the default parameters are suitable. The parameter can be adjusted in the RotoLAB Settings in the RotoLAB Menu (see section 17.3) under "Tool parameter".

10.1. Teach-in of start points

Important:

Make sure that the UFRAME is set to 0 before teaching-in any start positions.

10.1.1. Position X NOMINAL

Select the program RL_NOM_1.TP. Edit the point for the tool to be measured (see Figure 10).



Figure 10: Program RL_NOM_1.TP



At point X_NOMINAL teach-in a start position for measuring with RotoLAB. For the used robot tool, choose a point where the tool is vertical and close to the center of the measuring plane of RotoLAB (Figure 11).

Hint!

The central position of the tool is determined precisely when the tool is calibrated, so the taught position only needs to be approximately correct.

Important:

The index of X_NOMINAL must be always equal with the used tool and must be teached-in with this tool (e.g.: X_NOMINAL1 for tool 1)!



Figure 11: Position X_NOMINAL

In Figure 11 the welding torch is shown without the gas nozzle, as it must be removed for the measurement of the RotoLAB location. The robot tool should be lowered a few centimeters into the measuring plane for the measurement of the RotoLAB location.

10.1.2. Position X PREPOS

The position X_PREPOS is a preposition above the RotoLAB. This is the start and end position of each measurement.

Teach-in the point X_PREPOS, so that the robot tool is above the measuring plane of Ro-toLAB (see Figure 12).



Important:

The index of X_PREPOS must always be equal to the used tool and must be teached-in with this tool (e.g.: _PREPOS1 for tool 1)!



Figure 12: Position X_PREPOS

Hint!

If multiple tools are used, the sections 10.1.1 and 10.1.2 have to be repeated for each tool.

10.2. Start of measuring program

For the manual operation, the Teach Pendant must be switched on and operation mode T1 must be selected. The main program RL_MAIN.PC is called with two transfer parameters as following:

"CALL RL_MAIN(axis group, tool number)".

- Axis group of the used robot.
- > Tool number is the number of the used tool which will calibrated.

In the example program RL_R1T1.TP (see Figure 13) RL_R1T1.TP will be called with axis group 1 and tool number 1. The call is also working with disabled Karel.

Hint!

When another axis group or another tool is used, the transfer parameters for the call of RL_MAIN.PC must be adjusted or an additional program for the call must be created.



Busy Step Run 🗳 I/O	Heild Fault Prod HOyde RL_RIT1 LINE 0 T2 ABORTED	JOINT	100%
RL_R1T1			
		1/52	
1:	ROTOLAB FUNCTION CALL		
2:	<pre>!CALL RL_MAIN (X;Y)</pre>		
3:	X: AXISGROUP OF ROBOT		
4:	Y: TOOLNUMBER		
5:			
6:	LBL[8:START ROTOLAB]		
7:	CALL RL_MAIN(1,1)		
8:			
9:	IF R[70]<=1,JMP LBL[1]		
10:	IF R[70]=2,JMP LBL[2]		
11:	IF R[70]=3,JMP LBL[3]		
POI	NT	TOUCHUP	>

Figure 13: Call of RL_MAIN.PC in RL_R1T1.TP

After about 4 seconds the RotoLAB Main Menu is displayed (see Figure 14). The full RotoLAB menu is described in section 17.



Figure 14: RotoLAB Main Menu



10.3. Measuring the RotoLAB location

Important:

Changes to the location of the RotoLAB in relation to the robot or if the RotoLAB was replaced, the location must be new measured. The location can be reset in the RotoLAB Settings (see section 17.3) under "New measurement of RL or Tool". Subsequently run "RotoLAB Measurement". If the location is reset, all tools must be re-measured (see section 10.4).

Select the menu item F1 "RotoLAB Measurement" in the RotoLAB Main Menu (see Figure 14) to start the location measurement. If the location is already measured, this step will be skipped automatically. The location for each robot must be measured once.

A message will prompt to remove the gas nozzle. Remove it, if not already done and confirm with OK.

Hint!

For the location measuring also a rotationally symmetrical aid (e.g.: a pen) with a diameter > 4 mm can be fixed on the tool.

@ Busy	Busy Step Note Zaulu SYST-178 SHIFT-RESET Pressed									100%	
@ _{Run}	<mark>⊖</mark> I/0	Prod	TCyc	RL_SHO	W_MSG LI	NE 838	T2	RUNNING	JOINT		1008
USE	R										
Me	easur	ina	Roto	LAB	loca	atio	on				
w	ith T	lool	1. R	emor	ze az	as 1	noz	zle!			
					- 9						
		1				1			1		
	0	K									

Figure 15: Start of location measuring

RotoLAB now fully automatically begins to measure the location. It moves in a star-shaped pattern.



Once the measuring procedure is completed, a message is displayed to remount the gas nozzle.



Figure 16: Location measuring successfully completed

After acknowledgment of the message, tool measurement is immediately (see section 10.4).

Hint!

For troubleshooting see section 18.

10.4. Initial measurement of a tool

The initial measurement of a tool starts immediately after the location measurement. In case the location is already measured, or a new tool should be initial measured (see section 10.5) the measurement starts after the selection of "RotoLAB Measurement" in the RotoLAB Main Menu.

Hint!

If a new initial measurement of a tool should be carried out, the tool must be reset in the RotoLAB Settings (see section 17.3) under "New measurement of RL or Tool". Subsequently run "RotoLAB Measurement" in the RotoLAB Main Menu.

The measurement of the robot tool is carried out fully automatically. Messages will inform about the individual process steps.

When the initial measurement is completed, a message is displayed (see Figure 17).





Figure 17: Message on completion of initial measurement

To ensure that the tool was correctly initially measured, a tool test is carried out subsequently. On success the RotoLAB is ready for operation.

Important:

If the geometric parameters are changed (see section 0), a new initial measurement of the tool is required! Otherwise, a correct calibration of the tool cannot be ensured.

Hint!

For troubleshooting see section 18.

10.5. Measuring additional tools

RotoLAB can measure up to 16 tools. For a new tool start again with the initial setup (see section 0). If the RotoLAB location is already measured, the step 10.3 will be skipped automatically.

Hint!

Duplicate the program RL_R1T1.TP for the new tool and adjust the transfer parameters (see section 10.2) accordingly. By this the error evaluation (see section 12.3) is already implemented in the new program.



10.6. Using additional robots

RotoLAB can be used with up to four robots (with up to 16 tools each). For a new robot start with initial setup (see section 0) again.

Important:

Every robot needs an individual "RL_RobID" for registration with RotoLAB. This variable can be adjusted in the Interface Settings (see section 17.4) under "RotoLAB interface" (variable "rl_robid").

Hint!

Between the location measurements of several robots, the RotoLAB must be restarted.

10.6.1. RS232 interface

A maximum of two robot controllers can be connected with one RotoLAB via RS232. A RotoLAB with two serial interfaces is required (item no.: 531 002 02).

10.6.2. Ethernet interface

Up to four robot controllers can be connected with the RotoLAB via network. The robot controllers must be in the same network as the RotoLAB.

10.6.3. <u>Two robots on one controller</u>

To operate the RotoLAB on a robot controller with two robots the following additional steps must be carried out:

- Load the files in the folder "Multirobot" on the robot controller. This folder contains the TP programs for the second axis group.
- Set the Karel variable "multirobot" to "TRUE".
- Enter free position registers in the Karel variables "position_reg[1]" and "position_reg[2]".
- Enter the selected position registers in the program RL_MOV_1.TP or rather RL_MOV_2.TP. In these programs the movements are carried out.



11. RotoLAB integration into the production process

If the initial setup for the desired tool has been successfully completed, the RotoLAB measure routine can be integrated into the production process.

11.1. <u>Call of the RotoLAB program</u>

The RotoLAB program (e.g.: RL_R1T1.TP) can be called at any point in the production process. Approach and drive off points can be taught in RL_R1T1.TP.

As an alternative RL_MAIN.PC can be called directly with two transfer parameters (see section 10.2). For this option, the error evaluation (see section 12.3) must be complemented.

11.2. Test in automatic operation

In automatic operation the standard test is performed immediately including a possible correction of the tool. The RotoLAB menu is disabled.



Figure 18: Schematic diagram of standard test



11.3. Test in manual operation

If RL_MAIN.PC is called in manual operation, the RotoLAB menu is (see section 17). Select F1 "RotoLAB Measurement". Choose between a control measurement and a standard test:

- Control measurement: The deviation of the tool is determined and displayed on the end of the measurement. No adjustment of the tool data is performed.
- Standard test: Test with possible correction of the tool data (see Figure 18).

@ _{Busy}	Step	Hold	Fault	SYST-	-178 SH	IFT-RES	ET Pre	essed				100%
🖓 _{Run}	⊖ ₽ I/0	Prod	TCyc	RL_SH	HOW_MSG	LINE 8	94 <mark>T</mark> 2	2 RUI	NNING	JOINT		100%
USER	ર											
Co	ntro	l me	asur	eme	nt	wit]	1011	t.				
- тс		inet.	mont				10 4	-			_>	F 1
10	, r au	Jusi	litent	•••	• •	•	•••	•	•	•••		
					man							
Me	asur	emer	nt wi	th	TCP	ad	jus	tme	ent	•	>	F.2
												1.1
	CON	TR						COR	R			

Figure 19: Selection options in manual operation



12. Individual event procedures

RotoLAB gives you the option of performing individual actions at the start and at the end of the test. Furthermore the variable "RL_ERROR_STATE" can be evaluated after the end of the measurement program.

12.1. Program RL ONS 1.TP

This program is run at the start of the measuring procedure. At this particular time the robot is on the pre-position.

For measurement of welding torches with the default geometric parameters (see section 13), the welding wire must be of a sufficient length.

To ensure this, a wire feed can be executed in this routine.

Proceed as follows:

• Select the program RL_ONS_1.TP and insert the desired action.

12.2. Program RL ONE 1.TP

This program is run at the end of the measuring procedure. The robot is standing in the RotoLAB measuring system and then moves to the pre-position.

A possible wire feed issued during RL_ONS_1.TP can be reversed here.

Proceed as follows:

• Select the program RL_ONE_1.TP and insert the desired action.

12.3. Variable RL ERROR STATE

Different values depending on the measure result or measure error (see Table 4) are assigned to the variable "RL_ERROR_STATE". The variable is written in a register (in delivery state R[70]) and is evaluated after the call of RL_MAIN.PC (see example program RL_R1T1.TP).

Important:

If the number of the register will be changed in the Interface Settings (see section 17.4) under "RL_ERROR_STATE / Log-File", the program RL_R1T1.TP (see Figure 20) has to be changed accordingly.



Value	Description	Predefined instruction in the program RL_R1T1.TP
0	Measurement successfully com- pleted (including possible correc- tion).	RL_R1T1.TP will be closed
1	Deviation is in manual correction range. Tool has not been corrected (only possible in manual opera- tion).	RL_R1T1.TP will be closed
2	Deviation is outside the absolute	1. Comments:
	tolerance. No correction of the	"Repair the Tool now"
		"Insert Service Position"
		2. PAUSE
2	No object detected. There is no	3. RL_MAIN will be called again
5	object in the measuring plane.	L. Comments.
		Insert Service Position"
		2. PAUSE
		3. RL_MAIN will be called again
4	X-Y-measurement does not con-	1. Comments:
verge.	verge.	"Insert Error Handling"
		2. RL_R1T1.TP will be closed
		\rightarrow Troubleshooting see section 19
5	Maximum of the Z-value-changing	1. Comments:
	achieved. The tool moves too deep	"Repair the Tool now"
		"Insert Service Position"
		2. PAUSE
		3. RL_MAIN will be called again
6	Communication error with the	RL_R1T1.TP will be closed
-		\rightarrow Iroubleshooting see section 19
/	KOTOLAB error. Measurement	KL_KIII.IP WIII be closed
Ca		\rightarrow iroubleshooting see section 19

Table 4: Variable RL_ERROR_STATE



Busy Step Run 🗳 I/O	Hold Fault Prod TCyc	RL_RIT1 LINE) <u>T2</u>	ABORTED	JOINT	100%
RL_R1T1						
					15/52	2
6:	LBL[8:	START RO	TOLAE	3]		
7:	CALL R	L_MAIN(1	,1)			
8:						
9:	IF R[7	0]<=1,JM	P LBI	.[1]		
10:	IF R[7	0]=2,JMP	LBL [2]		
11:	IF R[7	0]=3,JMP	LBL [3]		
12:	IF R[7	0]=4,JMP	LBL [4]		
13:	IF R[7	0]=5,JMP	LBL [5]		
14:	IF R[7	0]=6,JMP	LBL [6]		
15 :	IF R[7	0]=7,JMP	LBL [7]		
16:						
POI	NT				TOUCHUP	>

Figure 20: Register instructions in RL_R1T1.TP



13. <u>Geometric configuration – TCP alignment</u>

RotoLAB is a measuring system that can be flexibly used for testing and correcting changes of robot tools.

In delivery state the geometric parameters are configured for a standard welding torch, as shown Figure 21.

Important:

If you change the geometric configuration, an initial measurement of the tool (see section 10.4) is required.



Figure 21: Measuring parameters for TCP alignment

Figure 21 shows the parameters relevant to TCP alignment with their delivery state configuration.

Hint!

The coordinate directions always refer to the RotoLAB coordinate system, so Z+ is not necessarily identical to the Z component of the tool coordinate system. The reference to the tool is established via the orientation of RotoLAB in relation to the Z component of the robot coordinate system (see section 3 Mechanical installation).

The point X_NOMINAL is the reference point by which the geometry of the welding torch is memorized.



13.1. Parameter RL DIAMETER

Hint!

The parameter RL_DIAMETER can be adjusted in the RotoLAB Settings (see section 17.3) under "Tool parameter" (variable "rl_diameter").

Important:

If the variable "rl_diameter" is changed direct in the Karel variables, the parameter RL_DIAMETER has to be transferred to the RotoLAB. To do this, select the item "Send RL_DIAMETER to RL" in the RotoLAB Service Menu (see section 17.2). Only the RL_DIAMETER of the current used tool is transferred.

RotoLAB allows a calibration to be performed on any point of a tool that shows a profile change. This is done by detecting the change of the diameter. The Z component (RotoLAB coordinate system) of the point on which the calibration is to be based on, is defined by means of its diameter.

The maximum diameter is 35 mm.

The parameter RL_DIAMETER is set to 4 mm in delivery state, so that calibration can be performed on the lower end of the contact tip. If this value does not match the given welding torch geometric, this parameter is to be adjusted accordingly.

If the parameter is set to 0 mm, the calibration is based on the end of the tool. E.g.: the end of the wire on a welding torch or the welding cap tip on a spot-welding gun.

13.2. Parameter RL Z OFFSET

Hint!

The parameter RL_Z_OFFSET can be adjusted in the RotoLAB Settings (see section 17.3) under "Tool parameter" (variable "rl_z_offset").

With RotoLAB the recording of the Z component can be separated from the calculation of the X-Y component and offset by a specific value (along the Z component of the RotoLAB coordinate system, which corresponds to the Z component of the robot coordinate system).

You can modify this parameter as required and thus shift the X-Y measuring plane in relation to the reference point _NOMINAL in the Z-direction.

Important:

In the default configuration the X-Y measuring is executed at the welding wire (see Figure 21). Therefore, the welding wire must have a sufficient length before the program starts. Otherwise, no object can be detected.

A wire feed can be executed in RL_ON_START, which is called before the start of measuring (see section 12.1 Program RL_ONS_1). The wire can be retracted again in RL_ON_END, which is called when the program terminates (see section 12.2 Program RL_ONE).



Advantages of RL_Z_OFFSET -2.0mm (delivery state):

- The feed-in of the contact tip is detected and compensated, as the X, Y position of the wire is measured and not the contact tip.
- Any soiling of the contact tip will not result in a distortion of the measurement result.
- If a contact tip does not allow a wire feed (e.g. if the contact tip is clogged with waste matter), it will output an error message (see section 19)

When must RL_Z_OFFSET be modified?

The value RL_Z_OFFSET can be modified according to the specific requirements of the tool. E.g.: if the value is set to 0 mm, the measurement of the X-Y value of X_NOMINAL takes place in the same plane as the Z component of X_NOMINAL.

If the end (e.g.: cap tip) of a tool is to be detected (parameter RL_DIAMETER=0) as it is the case with the measurement of spot-welding guns, the parameter RL_Z_OFFSET must be modified. In this case set the parameter to a positive value (e.g.: to 1.0 mm). This means the measurement of the X-Y value takes place 1mm above the measured point X_NOMINAL.



14. <u>Geometric Configuration – Typical Settings</u>

14.1. Stand application welding torch

By default, the position of the welding wire is checked 2mm below the contact tip. For the measurement of the z-component a position is required where a strong diameter change occurs. A common choice is the transition between contact tip and welding wire. The actual measuring point on the wire is located 2 mm below the level where the diameter falls below RL_Diameter. On this level the x/y-measurement is carried out. The default settings are shown in Figure 22.



Figure 22: Standard settings



14.2. <u>Alternative measuring position welding torch</u>

If the contact tip is frequently polluted, e.g.: by soot or liquid drops still the same measuring point can be used. In this case the measurement is carried out at a position where the diameter of the gas nozzle tapers down. Z_Offset must be adjusted accordingly. The exact values depend on the geometry of the gas nozzle and the location of the contact tip. An example of possible settings is shown in Figure 23.



Figure 23: Alternative settings for welding torches



14.3. Spot welding guns, gluing nozzles

Other tools like nozzles for gluing and sealing are checked directly at the tip of the tool. Therefore RL_Diameter is set to 0 mm. The X/Y-measurement is carried out 1 mm above this level. In Figure 24 the tip of the spire is being controlled.



Figure 24: Settings for gluing nozzles

A list of typical parameter combinations is shown in Table 5.

	Welding gun (standard)	Spot welding gun, Gluing nozzle	Welding gun (alternative setting) (see above)
RL_DIAMETER in mm	4	0	approx. 19
RL_Z_OFFSET in mm	-2	1	approx8

Table 5: Typical settings



15. Configuration of thresholds



Figure 25: Threshold values for tool measurement

Hint!

The thresholds can be watched and adjusted in the RotoLAB Settings (see settings 17.3) under "Thresholds for correction" (variables "rl_ rl_rel_ok", "rl_rel_auto" and "rl_abs_max").

The figure shows only two dimensions. The thresholds apply to all three dimensions, however (the circles therefore should be regarded as spheres). The third dimension was not included in order to make the illustration clearer.

Designation	Description
RL_REL_OK	Upper threshold of the OK range (reference: current tool)
RL_REL_AUTO	Upper threshold of the automatic correction range (reference: current tool)
RL_ABS_MAX	Maximum total deviation of the current tool data regarding the original tool data (reference: original tool)

Table 6: Threshold values (all threshold values are absolute values)



15.1. OK range

Mathematical definition: [0, RL_REL_OK [

This range is defined by the threshold "RL_REL_OK". It constitutes the upper limit of the range within the tool deviation is considered OK and no correction is performed.

15.2. Automatic correction range

Mathematical definition: [RL_REL_OK, RL_REL_AUTO]

This range is defined by the threshold "RL_REL_OK" and "RL_REL_AUTO". If the tool deviation is in this range, an automatic correction of the tool data is performed without any user interaction.

Hint!

If an automatic correction is not required, it is possible to simply disable this range. In this case, set the value of RL_REL_AUTO equal to that of RL_REL_OK.

15.3. Manual correction range

Mathematical definition: [RL_REL_AUTO, ∞ [without [RL_ABS_MAX, ∞ [

This range is defined on the one hand by the threshold RL_REL_AUTO, which refers to the currently measured deviation.

On the other hand, the threshold RL_ABS_MAX (this refers to the absolute deviation in relation to the original tool) constitutes the upper limit to the permitted correctable deviation.

If the deviation is within this range the user is prompted to confirm the correction of the tool data (see Figure 26). If the user confirms with "Yes", the tool data will be updated. If the user rejects the correction, the tool data will not be changed.

Hint!

In practice a manual correction range is rarely needed. RotoLAB can be configured so that a manual correction is deactivated. In this case, set the value of RL_AEL_AUTO to twice the value of RL_ABS_MAX. This results in the tool data being corrected automatically as long as the absolute tool change (deviation in relation to original tool) is not exceeded.





Figure 26: Deviation within the manual correction range

If the PLC interface is configured (see section 0), this dialog can also be answered via the PLC. Subsequent the RotoLAB program is continued.



15.4. No correction allowed

Mathematical definition: [RL_ABS_MAX, ∞ [

In this range no correction is carried out. Production is not allowed to continue, the robot is stopped. The tool must be replaced or repaired.

Hint!

The event procedure after this error message can be customized individually (see section 12.3).



Figure 27: Error message absolute deviation too great

If the PLC interface is configured (see section 0), this dialog can also be answered via the PLC. Following this error message, a new measuring will be started in delivery state.



16. <u>RotoLAB PLC interface configuration</u>

All messages requiring acknowledgment can be forwarded to the PLC by means of three digital outputs. The messages will be acknowledged with two digital inputs and, if necessary, answered with yes or no.

To use the PLC interface, this has to be enabled in the Interface Settings (see section 17.4) under "PLC interface" (variable "rl_use_plc"). In delivery state the plc interface is disabled.

16.1. Signal RL PLC RET

The output signal "RL_PLC_RET" [bit2, bit1, bit0] consists of three binary coded output signals. Messages requiring acknowledgement which result in a stop of the robot, are hereby forwarded to the PLC.

Value	Description	Dialog at the PLC
0	Measurement OK	-
1	Deviation in the manual correction range	Deviation in the manual correction range. Should a correction of the tool data be carried out? (yes/no)
2	Deviation outside absolute tolerance	Deviation outside absolute tolerance. No correc- tion allowed! Check the tool. (quit)
3	No object detected	No object in the measuring plane detected. Check tool and welding wire. (quit)
4	X-Y measurement does not	Resolve error, restart measurement
	converge	(Troubleshooting see section 19)
5	Maximum change of Z-value achieved.	Change of Z-value too great. Check tool. (quit)
6	Communication error with	Resolve error, restart measurement
	the RotoLAB	(Troubleshooting see section 19)
7	RotoLAB error, measuring	Resolve error, restart measurement
	cannot be performed	(Troubleshooting see section 19)

Table 7: Signal RL_PLC_RET

The outputs for the signal "RL_PLC_RET" can be adjusted in the Interface Settings in the RotoLAB Menu (see section 17) under "PLC Interface" (variables "rl_plc_ret0", "rl_plc_ret1" and "rl_plc_ret2").In delivery state the outputs 30, 31 and 32 are used.



16.2. Signals RL MSG QUITT and RL MSG ANSW

Acknowledgement of messages is done by the input signal "RL_MSG_QUITT". As soon as this signal is set, the dialog is closed on the Teach Pendant. The YES/NO selection for a dialog will be set by the input signal "RL_MSG_ANSW".

Important:

The signal "RL_MSG_ANSW" must be set before the acknowledgement. High means YES. Low means NO.

Signal	Description
RL_MSG_QUITT	As soon as the signal is set, the dialog is acknowledged on the Teach Pendant.
RL_MSG_ANSW	If the signal is set, the dialog is answered with yes. Otherwise with no. Has to be set before the signal "RL_MSG_QUITT"!

Table 8: Signals RL_MSG_QUITT & RL_MSG_ANSW

The inputs for the signals "RL_MSG_QUITT" and "RL_MSG_ANSW" can be adjusted in the Interface Settings in the RotoLAB Menu (see section 17) under "PLC interface" (variables "rl_msg_quitt" and "rl_msg_answ"). In delivery state the inputs 30 for the signal "RL_MSG_QUITT" and 31 for the signal "RL_MSG_ANSW" are used.

17. The RotoLAB Menu

If the RotoLAB main program (RL_MAIN.PC) is called with enabled Teach Pendant, the RotoLAB Main Menu is displayed (see Figure 28). The RotoLAB Software is controlled with this menu. A measuring can be started directly or settings in the parameters can be done.

Hint!

The questions to be answered in the menu navigation are highlighted in *italic and green* in this section.

The description refers to a call of the main program with CALL RL_MAIN (1,1) and with the default values as in delivery state.



17.1. RotoLAB Main Menu

Rusy Step Hold Fault	SYST-178 SHIFT-RESE	T Pressed		100%		
Run ♀ I/0 Prod ICyc	RL_SHOW_MSG LINE 90	4 T2 RUNNING	JOINT	1008		
USER						
Rote	LAB Main M	lenu				
RotoLAB Meas	surement		> F1			
RotoLAB Ser	vice		-> F2			
RotoLAB Set						
Set language to German> F4						
EXIT			-> F5			
				$(-1)^{-1}$		
	1	1				
F1 F	2 F3	F4	F5			

Figure 28: RotoLAB Main Menu

In the RotoLAB Main Menu you have following options:

RotoLAB Measurement (F1):

The RotoLAB measuring process will be started (initial setup see section 0, tool calibration see section 0)

RotoLAB Service (F2):

Menu "RotoLAB Service" will be displayed (see section 17.2).

RotoLAB Settings (F3):

Menu "RotoLAB Settings" will be displayed (see section 17.3).

Set language to English / German (F4):

Set the language of the RotoLAB application to English respectively German (see section 6).

> EXIT (F5):

Exit the RotoLAB program.



17.2. RotoLAB Service

Busy Step Holm Fault SYST-178 SHIFT-RESET Pressed	00%
Ω Run ♀ I/0 Prod TOyc RL_SHOW_MSG LINE 904 T2 RUNNING JOINT	
USER	
RotoLAB Service	
RotoLAB functional test> F1	
Send RL DIAMETER to RL> F2	
RotoLAB LED adjustment> F3	
Deactivate RL measurement> $F4$	
BACK	
	1.00
F1 F2 F3 F4 F5	

Figure 29: RotoLAB Service

In the RotoLAB Service Menu you have following options:

RotoLAB functional test (F1):

Running RotoLAB functional test, Measurement area clear?

- \rightarrow <u>YES</u>: Carry out functional test (see section 20.1).
- \rightarrow <u>NO</u>: Back to the service menu.

Send RL_DIAMETER to RL (F2):

RL_DIAMETER = 4.00 mm for Tool 1 OK?

- \rightarrow <u>YES</u>: Send "RL_DIAMETER" to RotoLAB. After this setting you have to carry out a new initial tool measurement (see section 10.4).
- \rightarrow <u>NO</u>: Back to the service menu.

RotoLAB LED adjustment (F3):

Run LED adjustment. Is measurement area clear?

- \rightarrow <u>YES</u>: Reinitializing the measurement sensors.
- \rightarrow <u>NO</u>: Back to the service menu.



Deactivate RL measurement (F4):

Deactivate RotoLAB measurement in automatic operation?

- \rightarrow <u>YES</u>: Deactivates RotoLAB measurement in automatic operation!
- \rightarrow <u>NO</u>: Activates RotoLAB measurement in automatic operation!

BACK (F5):

Back to RotoLAB main menu

17.3. <u>RotoLAB Settings</u>

Important:

To avoid unauthorized access of the RotoLAB parameters, the RotoLAB Settings can be disabled. Therefore set the variable "rl_expert" to FALSE. The variable is declared in the module rl_main.pc.

Busy Step Hold Run	Fault SYST	-178 SHIFT-RESE	T Pressed 4 T2 RUNNING	JOINT	100%
USER					
F	RotoLAB :	Settings	i -		
New mea	suremen	t of RL	or Tool	-> F1	
Tool pa	arameter			-> F2	
Treshol	d for c	orrectio	ns	-> F3	
Interfa	ace sett:	ings		-> F4	
BACK	•••			-> F5	
				4	
F1	F2	F3	F4	F5	

Figure 30: RotoLAB Settings

You must confirm that you are familiar with the documentation to get to the RotoLAB Settings.



In the RotoLAB Settings Menu you have following options:

> New measurement of RL or Tool (F1):

- Use tool 1? Tool numbers 1-10.
- \rightarrow <u>YES</u>: Tool 1 will be used.
- \rightarrow <u>NO</u>: Enter preferred tool number.

Re-calibrate tool 1?

- → <u>YES</u>: Reset tool 1. Re-calibrate tool 1 with "RotoLAB Measurement" (see section 10.4).
- \rightarrow <u>NO</u>: Re-calibrate location of RotoLAB in ref. to robot 1 with RL_RobID 1?
 - → <u>YES</u>: Resets the location of robot 1 with RL_RobID 1. Recalibrate location and tools with "RotoLAB Measurement" (see section 10.3).
 - \rightarrow <u>NO</u>: Back to RotoLAB settings.

> Tool parameter (F2):

Use tool 1? Tool numbers 1-10

- \rightarrow <u>YES</u>: Use tool 1.
- \rightarrow <u>NO</u>: Enter preferred tool number.

Is robot mounted on the floor?

- \rightarrow <u>YES</u>: Robot is mounted on the floor.
- \rightarrow <u>NO</u>: Robot is mounted on the ceiling headfirst.

Is tool moving into RL from above?

- \rightarrow <u>YES</u>: Tool moves from above (e.g. welding gun).
- \rightarrow <u>NO</u>: Tool moves from below (e.g. welding tongs).

RL_Z-OFFSET = -2.00mm OK?

- \rightarrow <u>YES</u>: RL_Z-OFFSET = -2.00mm will be used.
- \rightarrow <u>NO</u>: Enter a value for RL_Z-OFFSET (see section 13.2).

Calibration with Z-correction?

- \rightarrow <u>YES</u>: Correction of X, Y and Z coordinates of the tool (3D).
- \rightarrow <u>NO</u>: Correction of X, Y of the tool (2D).



RL_DIAMETER = 4.00mm for tool 1 OK?

- \rightarrow <u>YES</u>: RL_DIAMETER = 4.00mm will be used.
- \rightarrow <u>NO</u>: Enter a value for RL_DIAMETER (see section 13.1).

Important:

Afterwards the variable "RL_DIAMETER" is transmitted to the RotoLAB. To that the connection to the RotoLAB must be set up (see section 7).

> Threshold for corrections (F3):

Threshold OK-range OK? RL_REL_OK = .30mm

- \rightarrow <u>YES</u>: Threshold = 0.3 mm for OK-range.
- \rightarrow <u>NO</u>: Enter a value for OK-range (see section 0).

Threshold for automatic-correction OK? RL_REL_AUTO = .50mm

- \rightarrow <u>YES</u>: Threshold = 0.5 mm for automatic-correction.
- \rightarrow <u>NO</u>: Enter a value for automatic-correction (see section 0).

Threshold for manual-correction OK? RL_ABS_MAX = 5.00mm

- \rightarrow <u>YES</u>: Threshold = 5.0 mm for manual-correction.
- \rightarrow <u>NO</u>: Enter a value for manual-correction (see section 15.3).

Interface settings (F4):

Opens "Interface Settings" menu (see section 17.4).

BACK (F5):

Back to the main menu.



17.4. Interface Settings

R Busy Step Hold Fault	ST-178 SHIFT-RESET Pressed			
@ Run 🕰 I/0 Prod ICyc	_SHOW_MSG LINE 904 T2 RUNNING JOINT			
USER				
Interface	Settings			
	-			
RotoLAB inte	face> F1			
PLC interfac	> F2			
Teach Pendant interface> F3				
RL ERROR STA	E / Log - File> F4			
	_ ,			
BACK	-> F5			
F1 F2	F3 F4 F5			

Figure 31: Interface Settings

In the Interface Settings Menu you have following options:

RotoLAB interface (F1):

RL_RobID = 1 OK? Each robot on the same RotoLAB requires its own RL_RobID (1-4).

- \rightarrow <u>YES</u>: RL_RobID = 1 will be used.
- \rightarrow <u>NO</u>: Enter the preferred RL_RobID.

Serial communication (via JD17) with RotoLAB?

- \rightarrow <u>YES</u>: Serial port = 3 OK?
 - \rightarrow <u>YES</u>: Port 3 will be used.
 - \rightarrow <u>NO</u>: Enter the preferred port number (see section 7.1).

```
\rightarrow <u>NO</u>: Ethernet communication with RotoLAB?
```

→ <u>YES</u>: *IP-ADDRESS* = 192.168.200 *OK*?

- \rightarrow <u>YES</u>: IP-Address 192.168.200 will be used.
- \rightarrow <u>NO</u>: Enter the new IP address (see section 7.2).

IP-PORT = 59152 OK?

 \rightarrow <u>YES</u>: IP-Port 59152 will be used.

 \rightarrow <u>NO</u>: Enter new port number (see section 7.2).



IP-TAG = 8 OK?

 \rightarrow <u>YES</u>: IP-Tag 8 will be used.

 \rightarrow <u>NO</u>: Enter new IP-Tag (see section 7.2).

\rightarrow <u>NO</u>: Feldbus communication with RotoLAB?

- → <u>YES</u>: 24 input bytes are required! Start address for inputs = 161 OK?
 - \rightarrow <u>YES</u>: Start address 161 will be used.
 - \rightarrow <u>NO</u>: Enter new start address (see section 7.3.2).

24 output bytes are required! Start address for outputs = 161 OK?

- → <u>YES</u>: Start address 161 will be used.
- \rightarrow <u>NO</u>: Enter new start address (see section 7.3.2).

 \rightarrow <u>NO</u>: Back to "Interface settings".

> PLC interface (F2):

No PLC connectivity required?

 \rightarrow <u>YES</u>: Deactivates PLC interface.

→ <u>NO</u>: First output signal RL_PLC_RETO = 30 OK?

- $\rightarrow \underline{YES}: \qquad RL_PLC_RET0 = 30 \text{ will be used.} \\ RL_PLC_RET1 = RL_PLC_RET0 + 1 \\ RL_PLC_RET2 = RL_PLC_RET0 + 2$
- \rightarrow <u>NO</u>: Enter a value for RL_PLC_RETO (see section 16.2).

Input signal RL_MSG_QUITT = 30 OK?

 \rightarrow <u>YES</u>: RL_MSG_QUITT = 30 will be used.

 \rightarrow <u>NO</u>: Enter a value for RL_MSG_QUITT (see section 16.2).

Input signal RL_MSG_ANSW = 31 OK?

- \rightarrow <u>YES</u>: RL_MSG_ANSW = 31 will be used.
- \rightarrow <u>NO</u>: Enter a value for RL_MSG_ANSW (see section 16.2).

Teach Pendant interface (F3):

Acknowledgement of message texts via Teach Pendant possible? (Alternatively only via PLC!)

- \rightarrow <u>YES</u>: Message texts can be acknowledged by the Teach Pendant and via the PLC as well.
- \rightarrow <u>NO</u>: Message texts can be acknowledged only via PLC.



Output tool deviation in flange coordinate system? (Alternatively in tool coordinate system)

- \rightarrow <u>YES</u>: The deviations will be related on the flange coordinate system (Standard).
- \rightarrow <u>NO</u>: The deviations will be related on the tool coordinate system (Perhaps better idea about the geometrical changes of the tool mechanics).

RL_ERROR_STATE / Log-File (F4):

Register for RL_ERROR_STATE RL_REG_ERR = 70 OK?

- \rightarrow <u>YES</u>: RL_REG_ERR = 70 will be used.
- \rightarrow <u>NO</u>: Enter a value for RL_REG_ERR (see section 12.3).

Waive Log-File?

- \rightarrow <u>YES</u>: No Log-File will be created.
- \rightarrow <u>NO</u>: Path: MC: "..." for Log-File OK?
 - \rightarrow <u>YES</u>: The Log-File will be created at path "MC: ...".
 - \rightarrow <u>NO:</u> Change variable "rl_log_path" in rl_main.pc.
 - → <u>OK</u>:

Edit and change the karel variable "rl_log_path" (see section 5.3).

Content of the Log-Files see section 18.

Waive logging OK-range? (only a deviation will be logged)

- \rightarrow <u>YES</u>: Log entry only if a deviation occurs (see section 18).
- \rightarrow <u>NO:</u> Log entry for each measurement (see section 18).



18. Log-File

The RotoLAB program can create a log file. Every measuring process is logged. To that the log file has to be enabled in the Interface Settings in the RotoLAB Menu (see section 17.4) under "RL_ERROR_STATE / Log-File". The path for the log file is determined with the variable "rl_log_path". 100 measurements are logged. This number can be increased with the variable "LogMax".

19. Approach RotoLAB exchange / maintenance

If the RotoLAB is exchanged or remounted after maintenance, the following steps must be executed:

Send RL_DIAMETER to the RotoLAB:

If <u>not</u> the default value of 4 mm for RL_DIAMETER (see section 13.1) is used, this value must be sent to the RotoLAB. For this select the item "Send RL_DIAMETER to RL" in the RotoLAB Service Menu (see section 17.2). Only RL_DIAMETER of the current used tool is transmitted.

> New measuring of location and tools:

First the location of the RotoLAB must be reset. For this select the item "New measurement of RL or tool" in the RotoLAB Settings (see section 17.3) and reset the location. The tools are automatically reset. Subsequent the location of the RotoLAB and all tools require a new initial measurement. See sections 10.3 and 10.4.

Important:

If these steps are not respected after an exchange or a remount, a correct function of the RotoLAB is not ensured.



20. <u>Functional test / troubleshooting</u>

20.1. Functional test

The function test checks the communication with the RotoLAB and the function of the RotoLAB. Choose "RotoLAB functional test" in the RotoLAB Service Menu (see section 17.2) and run the function test.

Possible results and troubleshooting:

- <u>"RotoLAB is working and ready for operation":</u> Test of communication and function was successful. RotoLAB is functioning.
- <u>"Timeout" and "Error reading from channel"</u>: Communication error with the RotoLAB. Check settings (see section 7) and check cable connection.
- Error numbers 144, 145, 163 und 164:

The sensors are not optimal adjusted. Restart the RotoLAB or carry out "RotoLAB LED adjustment" in the RotoLAB Service Menu (see section 17.2). If the problem persists, please contact us.



20.2. Troubleshooting

Error	Meaning	Cause	Solutions
144, 145, 163, 164	Sensors not optimal adjusted	Significant change of envi- ronment brightness since the initialization; Sensors soiled	Restart RotoLAB; Run the functional test (see section 20.1)
218	Measurement of orientation failed	Nominal position taught in to high; Diameter of the tool not optimal in the measuring plane.	Restart RotoLAB; Optimize nominal position (see section 10.1.1); New measuring of the loca- tion (see section 10.3)
219	No object detected	No welding wire present; Tool strongly damaged; Nominal position was changed	Check welding wire, tool and nominal position; Restart measuring
220, 254	Movement change too great	Wrong geometric parame- ter;	Check tool; Check geometric parameter
245	No object in measur- ing plane	Tool strongly damaged;	(see section 14)
251	Maximal movement path exceeded	Location was not measured	New measuring of the loca- tion (see section 10.3)
252	xy measurement does not converge	Minor adjustment attempts of the robot (<1mm): Control accuracy of the robot not sufficient	Check the calibration of the robot; In rare cases it is necessary to increase the error thresh- old of the regulation (varia- ble "XYEps").
		Major adjustment attempts of the robot: RotoLAB detects an incor- rect shoulder and is possibly soiled	Run functional test (see section 20.1)
260	Timeout! RotoLAB is not responding	RotoLAB not responding in the given time	Check cable connection (see section 0);
261- 283	Diverse communica- tion errors	See error message	Check communication set- tings (see section 7)

Table 9: RotoLAB Errors



21. Technical data

Measuring procedure	2D coordinate measurement (x,y), 1D bisec- tion procedure (z)
Relative repeat accuracy	< +/- 0,03 mm
Measurement area	75 mm in diameter
Measurable tools	All rotation-symmetric tools and approxi- mates diameter: 0.8 mm – 50 mm
Tool test procedure	TCP test
Tool test duration	3 sec. (minimum, depending on robot speed)
Tool calibration procedure	TCP alignment
Tool calibration duration	< 30 sec. (depending on robot speed)
Tool calibration accuracy	< +/- 0.2 mm
Input voltage	24 V
Max. power consumption	150 mA
Data transfer	RS232 / Ethernet
Housing	Splash-proof aluminum housing
Dimensions	190 x 245 x 23 mm (WxDxH)
Affixing	horizontal

Table 10: Technical data



Wiest Aktiengesellschaft Siemensstr. 4, 86356 Neusäß www.wiest-ag.de info@wiest-ag.de | Fon: +49 (0)821 / 480 44 99 -0 | Fax: +49 (0)821 / 480 44 99 -5